Altair-Duino Assembly Instructions



Copyright © 2019 Chris Davis

Up-to-date instructions are always available at www.altairduiuno.com/instructions

I would strongly suggest comparing the parts you received with the list below. Let me know if you're missing anything and I will send a replacement.



PARTS LIST

- 1x PC board
- 36 x 5mm red LED
- 36 x 12mm LED standoff
- 36 x NPN transistor
- 36 x 1kΩ resistor
- 36 x 10kΩ resistor
- 17 x Mini toggle on-off
- 8 x Mini toggle (on)-off-(on)
- 1 x 470Ω resistor
- 1 x 47μF capacitor
- 2 x 1kΩ resistor
- 2 x 0.1μF capacitor
- 1 x Dual pin header
- 2 x Single pin header
- 1 x 6 Pin female header
- 1x USB cable
- 4 x 10mm nylon bolts

- 1 x USB panel jack/extension
- 2 x 8mm steel screws
- 1 x 9v power supply
- 1x Pre-programmed Arduino Due
- 1x Front panel
- 1x "Altair 8800" metallic sticker
- 1x 256mb micro SD card

If you have the "low profile" case version:

- 1x Bluetooth module
- MAX3232 DB9 serial module w/cable
- 1x Micro SD module
- 1x DC-022 Power jack
- 4 x 15mm M-F standoff
- 4 x 20mm F-F standoff
- 1 x 3.5mm Audio jack
- 1x Acrylic frame
- 1x Clear acrylic back
- 1 x Laser-cut rear panel
- 4 x 10mm steel screws
- 4 x 14mm steel screws
- 4 x square steel nuts

If you have the full case version with I/O expansion kit:

- 1x PC Board
- 1 x 16 pin DIP socket
- 1x 28 pin DIP socket
- 1x VGA connector
- 1x DB9 connector
- 1x PS2 keyboard connector
- 1 x 3.5mm audio jack

- 1 x Micro SD module
- 1 x DC power jack
- 1 x USB-A connector
- 4 x 4.7kΩ resistors
- 1 x 220Ω resistor
- 1 x 150Ω resistor
- 1 x 100kΩ resistor
- 1 x 82Ω resistor
- 1x 470Ω resistor
- 2 x 27pF capacitors
- 7 x 100nF capacitors
- 3 x 10uF capacitors
- 1x 5mm red LED
- 1x 8Mhz crystal
- 1 x MCP-1700 regulator
- 1 X Mici -1700 regulator
- 1 x MAX3232 IC
- 1 x PIC32 IC
- 1 x Dual pin header
- 1 x Single pin header
 - 8 x Jumpers
- 4 x Rubber feet
- 4 x 15mm M-F standoffs
- 8 x 8mm M-F standoffs
- 8 x Nylon nuts
- 4 x 6mm nylon bolts
- 1 x Laser-cut rear panel
- 11 x 14mm steel screws
- ITX 14mm steet screws
- 11 x square steel nuts
- 19 x 10mm steel screws
- 19 x Hex steel nuts
- 5 x Gray acrylic pieces
- 7 x Blue acrylic pieces

OTHER PARTS YOU MAY NEED

- Soldering Iron with a nice fine tip
- Good Solder (I recommend Alpha Fry Rosin Core 0.032")
- De-soldering Iron (optional)
- Phillips Screwdriver
- Needle-nose Pliers
- Side Cutters (Nippers)
- Computer


A word about soldering: Don't underestimate the need for good solder and a good soldering iron. Most problems I've seen people have with this kit are caused by cold joints or insufficient wetting. That doesn't necessarily mean you have to spend a lot of money. I've had good luck with \$8 soldering kits from eBay (however I do throw away the solder that comes with those...) Just make sure it has an adjustable temperature and comes with an assortment of tips. Right now, I'm using a \$55 soldering station and it works great. I strongly advise you to get quality 60/40 Rosin core .032" diameter solder (I use Alpha Fry or Kester). The spools I buy are only \$10 and well worth it. I set my iron to 400 degrees and use the fine point tip.

A note about assembling acrylic pieces: Some people may want to glue the case together. This is fine, and will add some strength to the project, but I'd suggest not using "super glue" or similar plastic cement. The fumes can adhere to the acrylic causing undesirable marks. I've had luck with "Loctite Plastics Bonding System" or other types of adhesives with activators. Assemble first to be sure everything fits, then disassemble and use adhesive.

Start off by finding the bag labeled " $1k\Omega$ Resistor".



Add the 36 1k Ω resistors to the top rows under the LED/Transistor pairs in locations R1-R36. Resistors are non-polarized, meaning they can go in either direction, you do not need to worry about orientation.

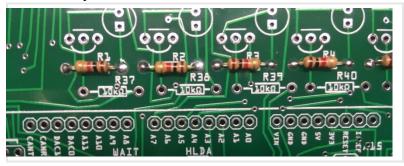


Next is the bag labeled " $10k\Omega$ Resistor".



Add the 36 10k\(\Omega\) resistors to the second row in R37-R72.



Next is the bag of 36 transistors.

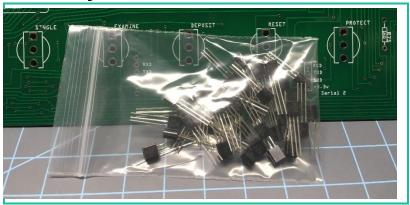


The orientation of the transistor is crucial, but relatively simple. Just make sure the flat end of the transistor is facing up, just like the image printed on the circuit board.



Grab the ziplock bag of assorted parts.




In that bag you will find one electrolytic capacitor and one 470Ω resistor (Yellow, Violet, Brown, Gold color code). If you don't want to decipher the color code, just know you will find three resistors in the bag, two that match, and one that does not. This is the one that does not match another.

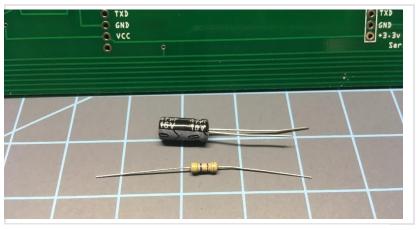


These two components mount on the PC board in R73 and C1. The orientation of the resistor does not matter, but make sure the short lead of the capacitor (marked with a "-" on the side) goes in the hole also marked with a "-".




In the same bag, you will find two 0.1 μ F capacitors (marked with "104") and two 1 $k\Omega$ resistors (Brown, Black, Red, Gold).

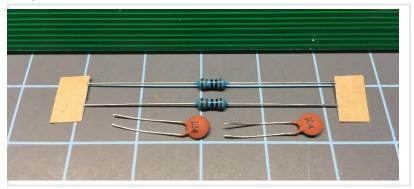


Those can be mounted on the front of the PC board in R74, R75, C2, and C3 on the lower right side of the board. The orientation of the components does not matter.

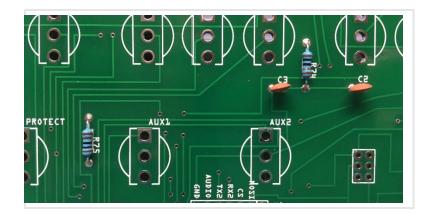

Use your side cutters to clip the single pin headers into 5 segments of 8 pins, and 1 segment of 10 pins to mount the Arduino board. Also clip the double header to a 36-pin (2×18 pin) header.

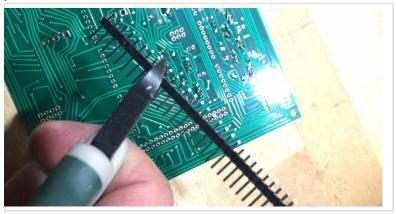

Add the male headers to the <u>underside</u> of the PC board. You can also add the six-pin female header for the SPI connector on the Arduino. Make sure you add these to the correct side of the board because desoldering 92 connections would not be fun!

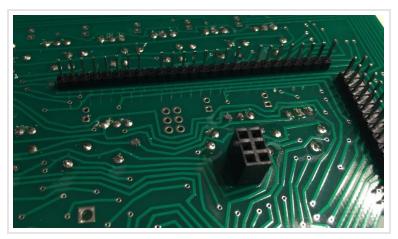


Solder the headers carefully. Make sure they are as close to vertical as possible, and make sure the solder flows completely over the connection. **Most problems happen** here with cold solder joints, or solder bridges.

It may be helpful to install the headers in your Arduino Due, then insert the headers in the circuit board to hold them in the correct position while soldering.




After you're done soldering the headers, try putting the Arduino in place and check for a secure fit. Remove it when you're done.

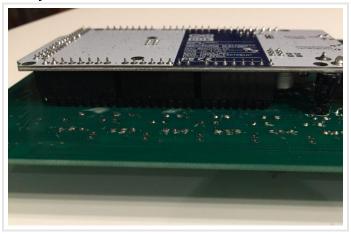


Get the bag containing 35 toggle switches. If your switches have nuts and washers, you may remove and discard them. Flip each switch back-and-forth a few times making sure it switches freely.




Put all the switches in place without soldering them. 17 two position toggles on the top row and the power switch location, 8 three position momentary toggles on the bottom row.

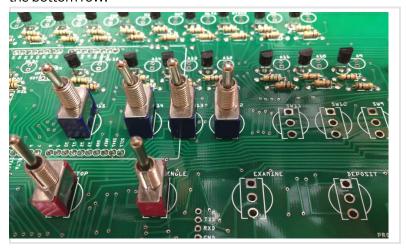

Put the front panel in place to hold the switches in the correct position (having all two-way switches in the down position makes this easier.)

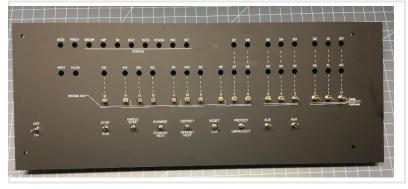


Turn the board over and solder the switches.
HINT: Before you solder, make sure all three legs are protruding through the holes. Two isolated incidents have been reported where the leg was pushed up into the switch, causing a short which was *very* difficult to diagnose!

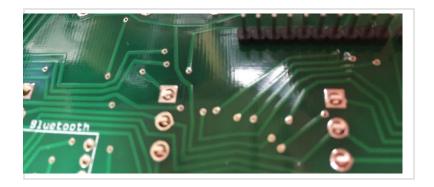

Next is the bag of LEDs and 12mm spacers.




Just like the switches, put the LEDs and spacers in place and do not solder them. You do not have to do them all at once, it may be easier to do them in two or three groups. The orientation if the LEDs is crucial. Make sure the long lead of the LED is toward the bottom of the PC board and the flat side of the LED is toward the top.

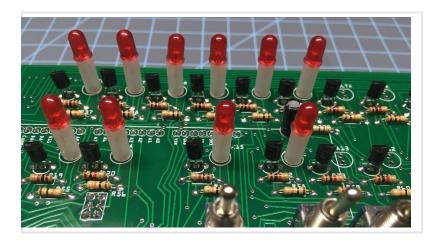


Again, like the switches, put the front panel in place to hold the LEDs while you solder them.



While you are soldering the LEDs, you can verify that the long lead is toward the bottom of the board.

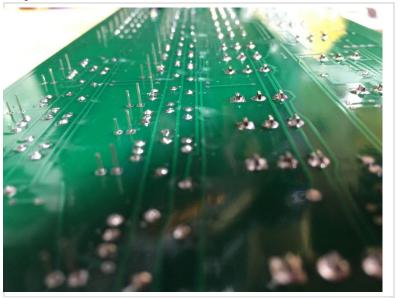

Make sure you trim the leads near the Arduino position after you solder the components. The protruding leads can interfere with the mounting of the Arduino.

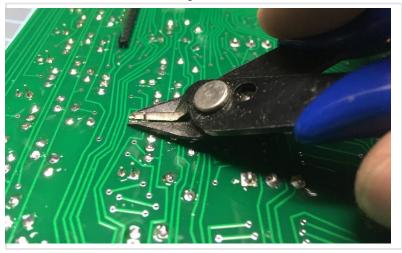

Put the Arduino in place.




This is a good time to test your kit so far. Take the USB cable and plug it into the Programming port on the Arduino. Turn the board over (so you're looking at the face) and plug the other end of the USB cable into a computer or USB power supply. When the kit is powered, all LEDs will briefly flash, then go dark, and a second or two later, a random pattern of LEDs will light. My favorite quick-and-easy test is to set SW1 on and lower the AUX1 switch. This will run "Kill The Bit" and you will see LED15 to LED8 light in sequence.

Here's a good second test: set all address switches (two-way toggles) to ON and raise the EXAMINE toggle. All address LEDs (0-15) should light. If not, there is either a problem with that addresses LED or toggle switch.

If you are building a kit with the "low profile" case, continue here (otherwise jump ahead 14 pages):

Add the 14mm male/female standoffs on the top, and 20mm female/female standoffs on the bottom (the side with the Arduino.)

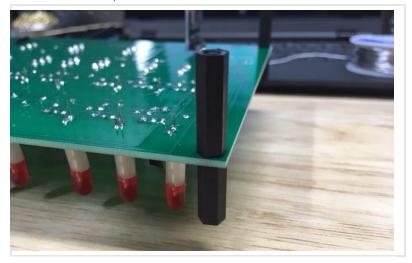

Next, we're going to add the Bluetooth module. If your module has angled pins, that's not quite what we want.



Grab a needle nose pliers and bend the pins straight slowly and gently.





You can now solder the Bluetooth module to the *underside* of the PC board.

Your Bluetooth module may have six pins or four pins. If it only has four pins – solder them to the *center four pins* of the six-pin connection area.




Install the micro SD card module, also on the underside of the PC board. Put the SD card in the module.

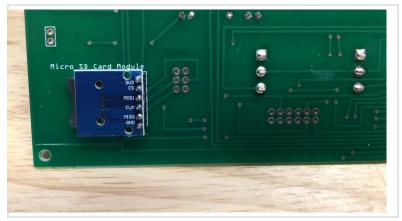


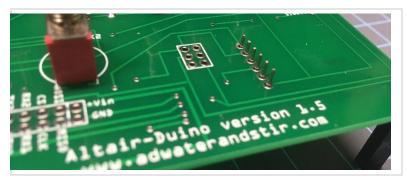

Now we will assemble the case and rear panel.

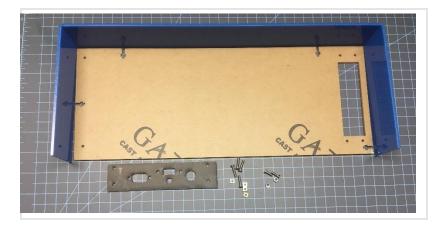

Remove the protective masking paper from the rear panel. Be particularly gentle around the cut-outs so they are not broken.

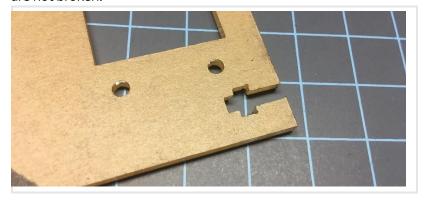


Four screws and four flat nuts are used to secure the rear panel.



Make sure the screws are secure, but no not make them overly tight, they can break the acrylic.




Place the laser cut panel in place and secure it with the two outside holes (leaving the inside two holes to later mount the circuit board.)

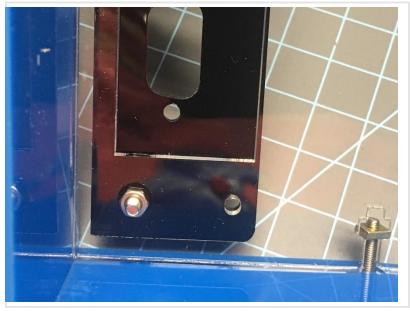


Now you will mount the components in the rear panel. First, attach the four-wire cable to the RS232 module and remove the jack screws (use a needle-nose pliers, or a 3/16" or 5mm nut driver.)




Put the module in place and secure it with the jack screws.

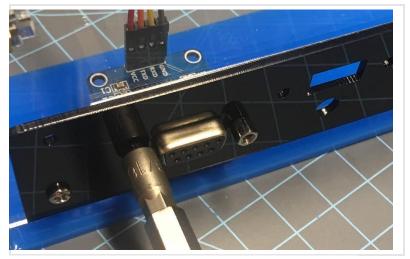


Add the DC power jack and tighten the nut. Follow that by installing the audio jack and carefully tightening the nut.

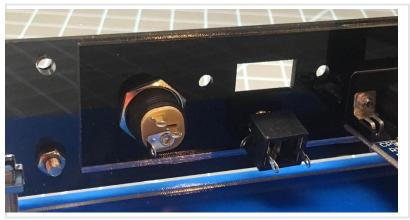


Solder the hookup wires to the DC jack and audio jack. The length of the wires is determined by where you want to connect these wires (see next.)

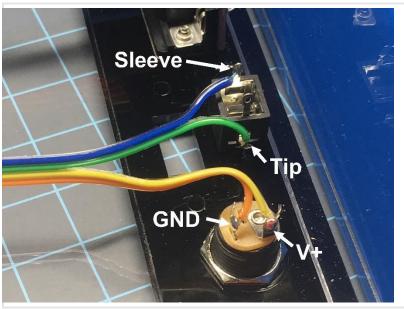

The length of the wire will depend on where you want to connect the audio and power. You can connect then to the pads on both ends of the board (marked +Vin/GND for power, and Ring/Tip/Sleeve for audio.)

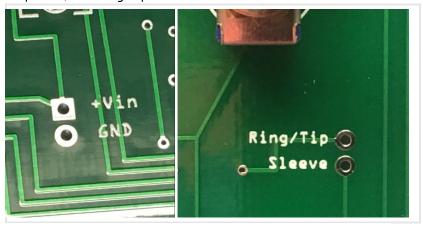

Or you can attach them to the 14-pin expansion connector which is closer to the panel. Power goes to the pads marked +Vin/GND, and audio to the pads marked AUDIO/GND.

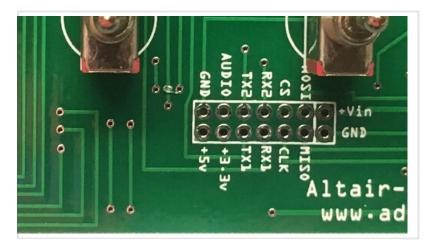

However, I would suggest you do not use these if there is a chance you will upgrade to the I/O expansion later.

Solder a four-pin piece of left-over single pin header to the underside of the circuit board where serial port 2 is indicated.




Connect the other end of the four-pin cable from the serial module to that four-pin connector. Please note: this is not a "straight through" connection. Make sure the matching labels are connected properly.

VCC -> VCC, GND -> GND, TXD -> RXD, RXD -> TXD


Find the USB extension cable and two 8mm screws.




Attach it in place to the rear panel.

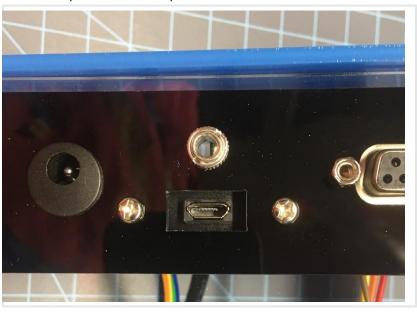

Connect the other end to the programming port on the Arduino.

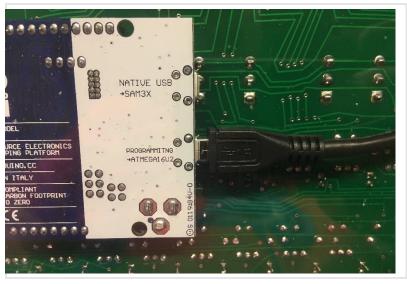


You can now put the assembled circuit board in place. You will need to bend down the connections for the serial module as shown.

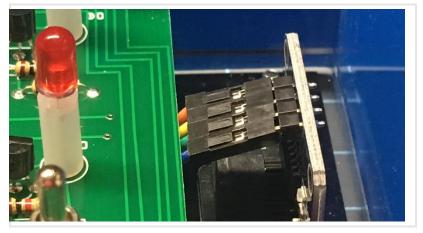


The USB cable is routed as shown with the end of the panel jack resting firmly against the side of the circuit board.



Attach the circuit board to the rear panel with four 10mm steel screws.

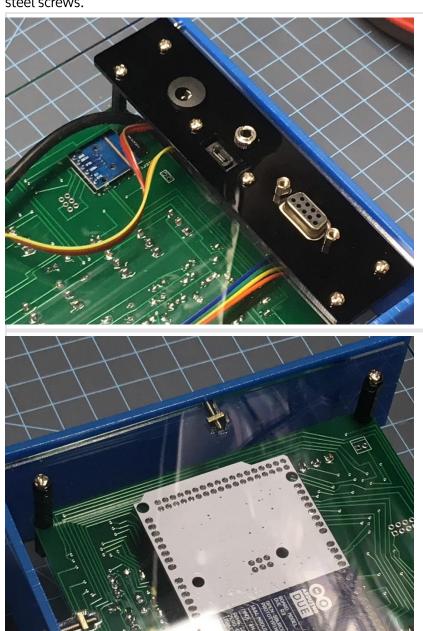

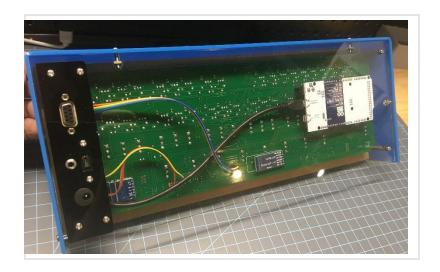

Apply the Altair 8800 sticker to the front panel. The adhesive is forgiving, so if you place it wrong, you can pull it up and put it in place again. Use a small Phillips screwdriver or awl to poke holes where the bolts will go.



Your label will be a little bit longer than the front panel.



You may wrap the excess around the edge of the panel or trim it with a sharp razor.

Put the front panel in place, push down around the LEDs and switches to set it properly, and add the 10mm nylon bolts.




If you are building a kit with the full acrylic case and I/O expansion, continue here:

In your kit you will find a smaller circuit board and a bag of miscellaneous parts.



There are nine resistors to install with six different values. You will need to identify your resistors with a multimeter, or with the color codes (see resistor-calculator.com for a handy tool.) The locations for the resistors are clearly marked on the circuit board.

4 x 4.7kΩ	(Yellow – Pink – Black – Brown)
$1 \times 470\Omega$	(Yellow – Pink – Black – Black)
$1 \times 150\Omega$	(Brown – Green – Black – Black)
1 x 82Ω	(Black – Gray – Red – Black)
1 x 220Ω	(Red – Red – Black – Black)
$1 \times 100 \text{k}\Omega$	(Brown – Black – Black – Orange)

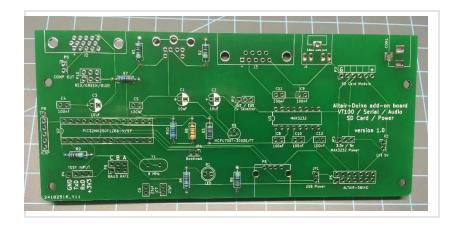


Add the capacitors and 8MHz crystal where marked.


7 x 100nF (marked "104")

2 x 27pF (marked "27")

3 x 10uF (Important: insert long lead in + hole)

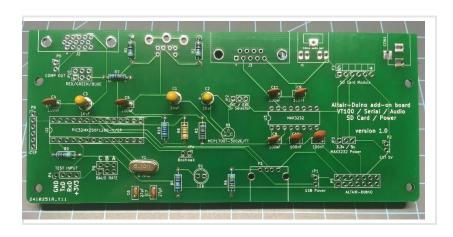

Next add the IC sockets (with the notch oriented to the left) and the single pin and double pin headers.

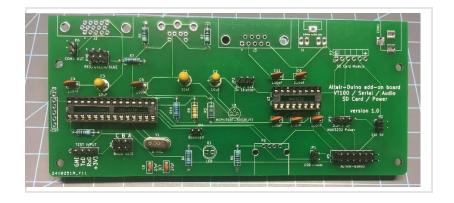


Add the LED *with long lead to the right and flat side to the left) and the MCP1700 voltage regulator with the flat side down.



Add the jacks and connectors.



Finally, insert the MAX3232 IC and PIC32 IC with the notch facing left. Your I/O expansion is complete, and you may set it aside.

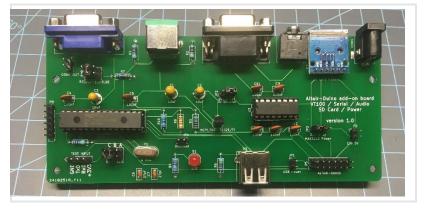

Add the required jumpers to the I/O expansion. The following are the "default" jumpers. Later you can read more about the jumper options.

From upper left to lower right:

Red/Green/Blue: Your choice of text color on VGA monitor, you must jumper at least one.

3v Selector: Set to EXT.


Baud Rate: Jumper C and B for 9600 baud.

Bootload: No jumper.


MAX3232 Power: Set to 3.3v.

USB Power: Set to no jumper.


Get the acrylic pieces and start removing the masking paper. (In the following photos you will see blue and white acrylic. Your kit has blue and gray acrylic.)

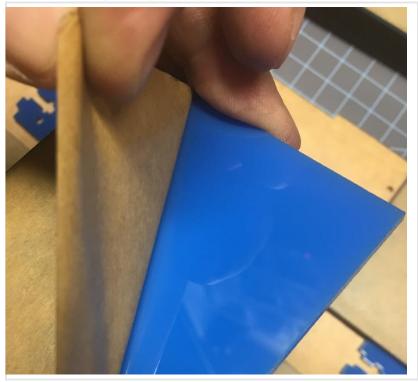

Take the two smaller acrylic pieces with the word "Top" engraved. Add four 8mm nylon standoffs to the side that says "Top" and secure each with a nylon nut.

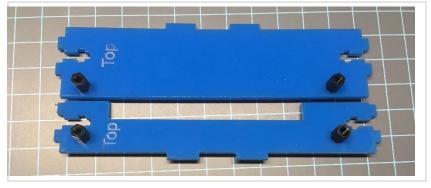


Next take the two gray side pieces (with "ventilation holes" and attach the blue side pieces with three 10mm bolts each.

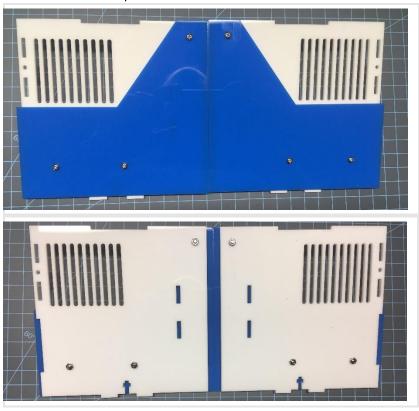

Attach the blue top piece to the gray top piece as shown with 10mm bolts. Make sure the blue piece extends 6mm over each side (turn it over if it doesn't.)




Attach the two back pieces together with 10mm bolts.

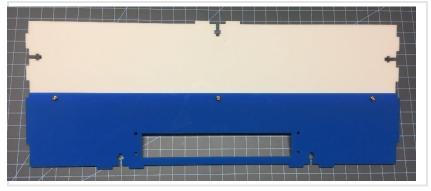

Attach the I/O circuit board to the blue bottom piece with four 8mm standoffs, nylon nuts and nylon bolts.



Attach the gray piece (as shown) to the bottom with 10mm bolts.

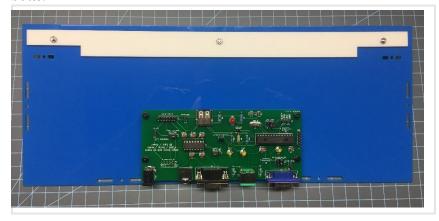



This would also be a good time to apply the rubber feet to the bottom piece.




Next we're going to start joining acrylic pieces with a t-slot joint. Start with the uprights where we will eventually mount the main circuit board. Attach them to the bottom piece with 14mm bolts and square nuts. Tighten firmly, but not too tight – acrylic can crack.



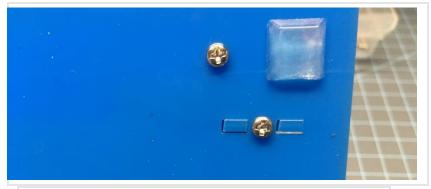

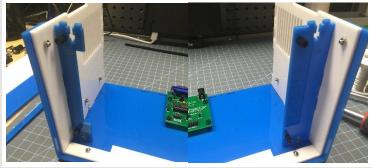

Add the back piece and side pieces and bolt in place with four 14mm bolts.

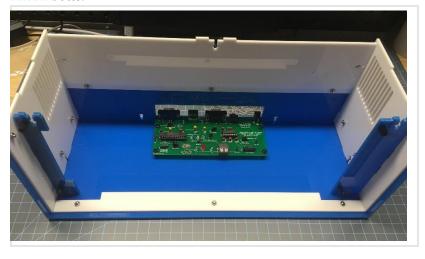



Add the top piece as shown and secure with three 14mm bolts.



Get the small rear panel (for the ports) and add the USB extension with two 8mm bolts.



Remove the jack screws from the VGA and Serial connectors with a needle-nose pliers, or a 3/16" or 5mm socket.



Place the rear panel in place and secure it with the jack screws and four 10mm bolts.



Connect the fourteen pin IDC cable to the I/O board, with the red stripe to the left.



Get the main circuit board and solder a fourteen pin dual header on the lower right.



Connect the USB connection cable to the Programming port on the Arduino Due.




Attach the main circuit board to the case with 15mm M-F nylon standoffs.



Apply the Altair 8800 sticker to the front panel. The adhesive is forgiving, so if you place it wrong, you can pull it up and put it in place again. Use a small Phillips screwdriver or awl to poke holes where the bolts will go.




Your label will be a little bit longer than the front panel.

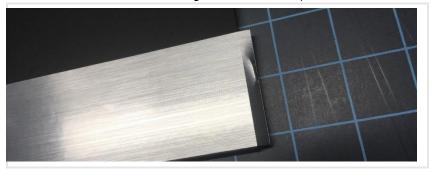


You may wrap the excess around the edge of the panel or trim it with a sharp razor.

Plug the fourteen pin IDC cable onto the front of the circuit board with the red stripe on the left.

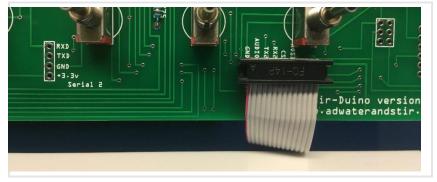

Add the front panel to the main circuit board, push down around the toggle switches, and secure it with four nylon bolts.

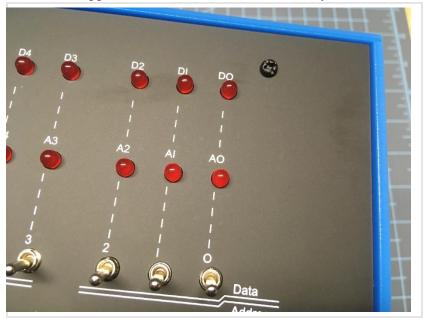

CONGRATULATIONS! YOUR ALTAIR 8800 IS COMPLETE!

See the web page <u>www.adwaterandstir.com/operation</u> for full documentation and easy step-by-step things to do.

Here are a few easy things to try:

By default, your Altair-Duino is set up to communicate through the USB port.

- Plug USB cable into computer and the other end to your Altair-Duino.
- 2. Windows 10 should automatically recognize a new serial port. To check, launch "Device Manager".
- 3. Expand "Ports (COM & LPT)" in Device Manager
 - > 🕼 Other devices


 > 🖷 Ports (COM & LPT)

 Arduino Due Programming Port (COM8)

 Standard Serial over Bluetooth link (COM10)

 Standard Serial over Bluetooth link (COM9)
- 4. Your port should be identified as "Arduino Due Programming Port".
- 5. Launch PuTTY (or another terminal program if you choose.)

6. Connect to the indicated COM port at baud rate 115200.

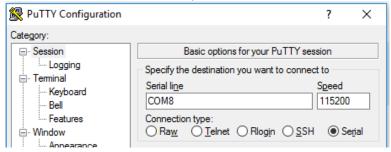

- 7. The front panel lights will flash briefly while it connects.
- 8. With all switches down, press AUX1 down.
- 9. On the terminal, you should see a directory of options for front panel switches.

```
00000000) [print this directory]
00000001) Calculator
00000010) Calculator
00000010] Pong (LEDs)
0000010) Pong (LEDs)
00000101) 16k ROM Basic
00000110) 16k ROM Basic
00000111) MITS Programming System II
00001000) Disk boot ROM
00001010) ALTAIR Turnkey Monitor
00001010) Music ('Daisy')
00001010) CPU Diagnostic
00001100) CPU Exerciser
00001101) Music system
00001110) Music system
000001110) Music system
00001111) Multi-boot loader ROM
01xxxxxxx) [Read Intel HEX data from primary host interface]
10nnnnnn) [load memory page, nnnnnn=file number]
```

If you have a serial device (such as a dumb terminal):

- Plug a serial cable from the Altair-Duino to your serial device.
- 2. Connect a power supply to the Altair-Duino.
- 3. Set front panel data switches to "2" (switch 1 up, all other switches down).
- 4. Raise (and hold) DEPOSIT up.

5. Turn on Altair-Duino.

This will cause the Altair-Duino to load configuration 2 on power up. This configuration has been saved to communicate on serial port 2 at 9600 baud.

If you have Geoff Graham's VT-100 emulator on serial port 1 (using the I/O expansion board):

- 1. Plug a VGA monitor and PS2 keyboard into the Altair-Duino. Power on the monitor.
- 2. Connect a power supply to the Altair-Duino.
- 3. Set front panel data switches to "1" (switch 0 up, all other switches down).
- 4. Raise (and hold) DEPOSIT up.
- Turn on Altair-Duino.

You should see "ASCII Video Terminal Version 1.3 Copyright 2013 Geoff Graham" on the VGA monitor. With all switches down, press AUX1 down. On the monitor, you should see a directory of options for front panel switches.

```
PSCII Uideo Terminal Ver 1.3
Copyright 2814 Geoff Graham

80000008) [print this directory]
8000008) Calculator
8000008) Calculator
8000008) Print this directory]
8000008) Print This Brown Calculator
8000008) Print This Brown Calculator
8000019) Print P
```

Please see the website (adwaterandstir.com) for many other examples and walk-throughs for common functions. Also visit the online forum to discuss the Altair-Duino with other enthusiasts, or to ask questions (adwaterandstir.com/forum).

Altair 8800 Simulator - Copyright (C) 2017 David Hansel

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 3 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

VT100 Terminal – Copyright (C) 2014 Geoff Graham All rights reserved.

Get out your reading glasses, because following is a reprint of David Hansel's documentation. David's manual is specifically written for the software and there may be minor differences with my implementation of his software in my kit.